

Victorian Taxi Directorate

Prepaid taxi fare labels

Manner and location of fitting approved labels (with photographs)

PREPAID FARES 10PM TO 5AM

(white text on red background)

This label must be placed:

Sedans

Rear window – affix in a central position at the top of the window. Do not place label over, or obstruct, any high mounted rear brake light



Station wagons

Bottom of passenger side (near side) rear window (cargo area window)



Van type taxis (WATs)

Bottom of passenger side (near side) rear window (i.e. window of the side entry door)



Department of Transport

Victorian Taxi Directorate, Level 23, 80 Collins Street, Melbourne VIC 3001 PO Box 2797, Melbourne VIC 3001 Phone: 1800 638 802 (toll-free) www.taxi.vic.gov.au
Authorised by the Victorian Government, 80 Collins Street Melbourne 3001.

June 2011

Victorian Taxi Directorate

PREPAID FARES 10PM TO 5AM

(black text on silver background)

This label must be placed directly below or above the existing "TAXI" label on the front of all taxis.

Sedans/Station Wagons



Van Type Taxis




Internal label – inside taxi

The internal label shown (sample below) must be affixed to the dashboard of the taxi in a position visible to front seat passengers, but not on or over any area related to the SRS Air Bag.

Van type taxis – a second label must be fitted adjacent to the other prescribed labels on display in the rear passenger compartment (example – tariff, taxi tolls etc).

Sedans/Station Wagons

Van Type Taxis – subject to dashboard design

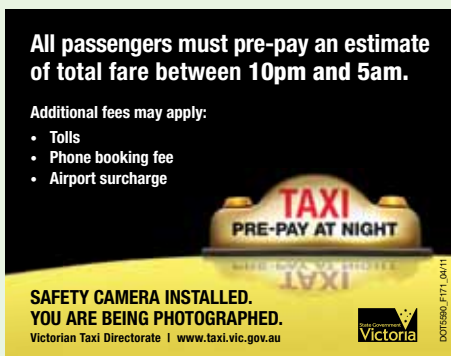

If the above label positioning requirements do not suit your make/model of taxi-cab(s), please contact the VTD on 1800 638 802 (toll-free).

Department of Transport

Victorian Taxi Directorate, Level 23, 80 Collins Street, Melbourne VIC 3001 PO Box 2797, Melbourne VIC 3001 Phone: 1800 638 802 (toll-free) www.taxi.vic.gov.au
Authorised by the Victorian Government, 80 Collins Street Melbourne 3001.

June 2011

